

TUNGSTEN INCREMENTAL WEIGHTS™

INSTRUCTIONS

- Select desired Weights. If needed, insert Spacer(s) for precise weight configuration (**Fig. 1 and 2**).
- Various weight configurations are illustrated on back of package.
- Attach Weights with PineCar Super Glue (P381), Formula Glue® (P384), Screws or double-sided tape (**Fig. 3 and 4**).

TIP! For optimal racing performance, use PineCar Performance & Conformity System™ (P4035) to help determine the best possible weight placement for your car's center of gravity.

INSTRUCTIONS

- Sélectionnez poids que vous désirez. Si nécessaire, insérez spacer(s) de configuration de poids précis (**Fig. 1 et 2**).
- Différents poids configurations sont illustrées à l'arrière du paquet.
- Fixez les poids avec PineCar colle super (P381), Formule Glue® (P384), vis ou ruban adhésif double face (**Fig. 3 et 4**).

CONSEIL! Pour optimiser les performances, utilisez PineCar Performance & Conformity System™ (P4035) pour vous aider à déterminer le meilleur emplacement pour votre voiture poids du centre de gravité.

Incremental design allows weight placement in exact 1/16 oz increments.

 1/16 oz 1.77 g	 1/8 oz 3.54 g
 3/16 oz 5.31 g	 1/4 oz 7.08 g
 5/16 oz 8.85 g	 3/8 oz 10.6 g
 7/16 oz 12.4 g	 1/2 oz 14.1 g

Fig. 1



Fig. 2

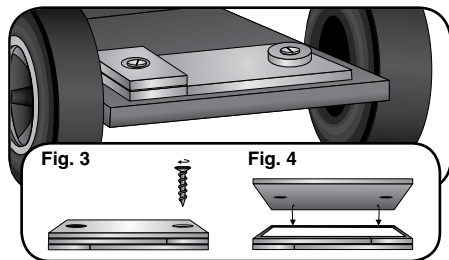


Fig. 3

Fig. 4